


Nelplas Wall Protection Systems

S350 Surface-Mounted Corner Guard

Installation Instructions

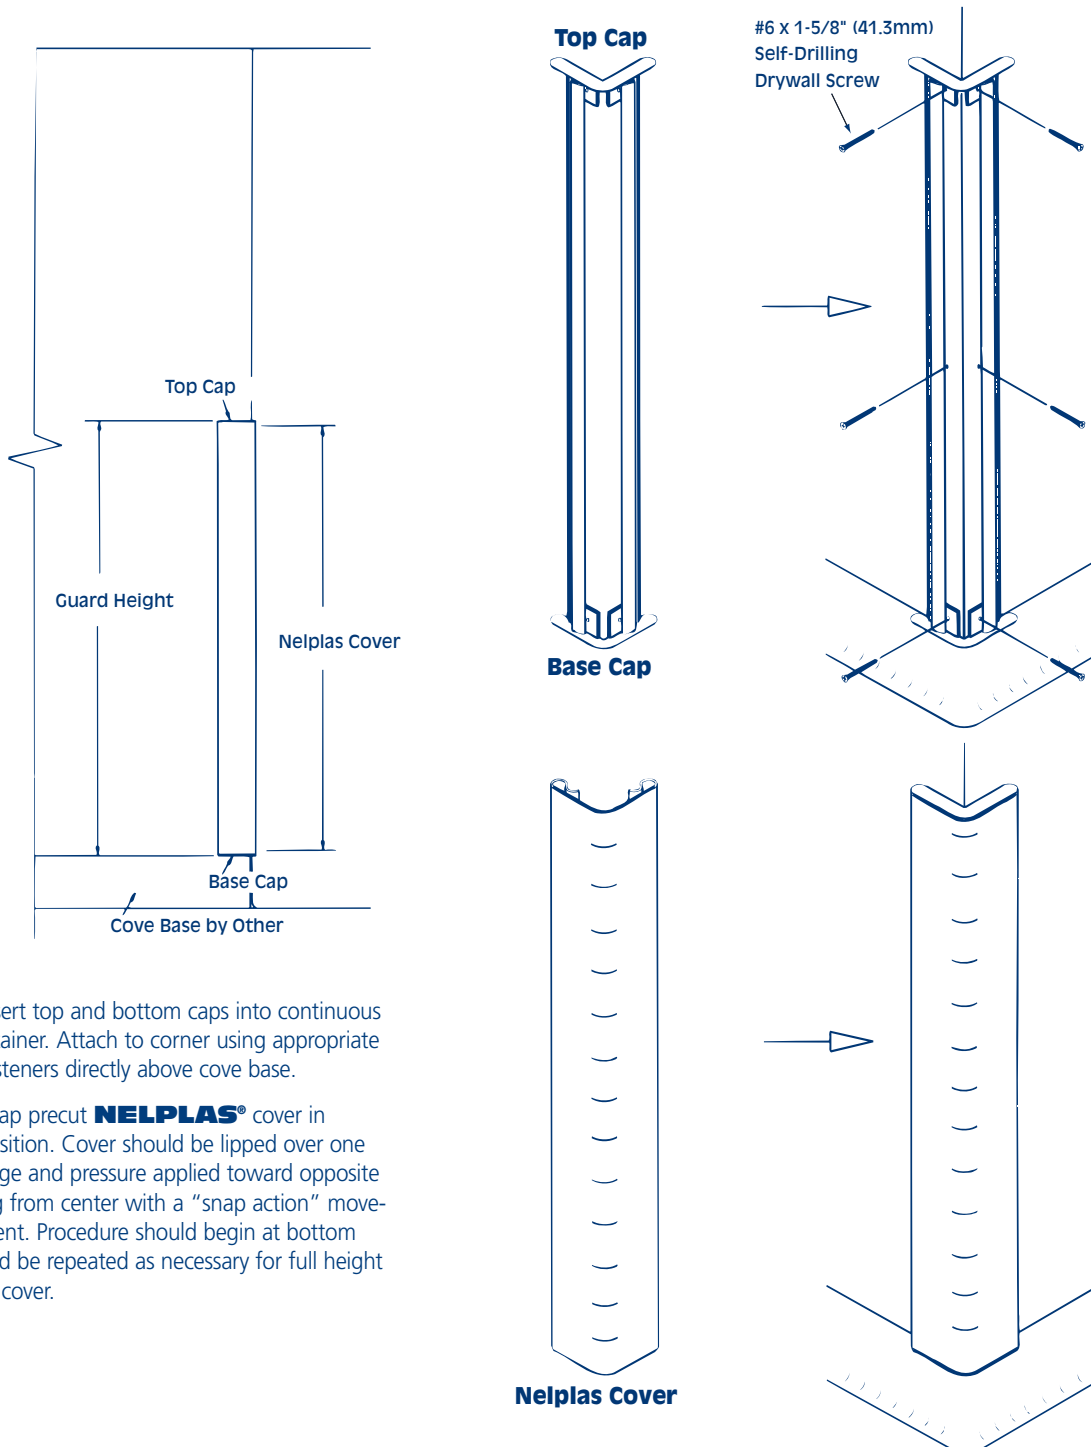

1. Insert top and bottom caps into continuous retainer. Attach to corner using appropriate fasteners directly above cove base.
2. Snap precut **NELPLAS**® cover in position. Cover should be lipped over one edge and pressure applied toward opposite leg from center with a "snap action" movement. Procedure should begin at bottom and be repeated as necessary for full height of cover.

NOTE: Use nylon tappits for masonry conditions.

NELPLAS[®]

Wall Protection Systems

800-628-0449 • www.nelplas.com • Division 10 26 00